сотмаркет

Инструкция для Pyle PIPDSP2B

Перейти в карточку товара

8 800 775 98 98
Получите техническую консультацию.
Круглосуточно. Без выходных

www.sotmarket.ru
Подробная информация о товаре,
отзывы, обзоры и аксессуары

OWNER'S MANUAL

Please Read the Manual First before Operation

PIPDSP2

iPod/iPhone iPad Docking Station
with Built-In FM Radio/Alarm Clock

WWW.PYLEAUDIO.COM

Table of Contents

Important Safety Information 1
- For Customers
- Caution

Package Contents 1

LCD Display Window 2

Main Unit 2

Back Panel Connection 2

iPod Compatible 3

iPad Compatible 3

Manner of Working with iPad 3

Remote Control System 3
- Battery Installation
- Note

Touch Key Control System 4

Basic Operation 4
- Power Up the System
- Select Sleep Mode
- Master Volume Control
- How to Adjust Treble
- How to Adjust Bass
- How to Play AUX
- How to Play iPod/iPhone/iPad
  - iPod/iPhone/iPad connection
  - iPod/iPhone/iPad control
- How to Play Tuner
  - Select FM Input Mode
  - Listen to the Preset Program
  - Select Program
  - Memory Program
- How to Adjust the Clock
- How to Adjust the Alarm
  - Alarm Setting
  - Alarm Source Setting
  - Turn on/off Alarm
- How to Mute

Trouble Shooting

Important Safety Information

For Customers

Thank you for purchasing the docking center. We strongly recommend that you carefully study the operating instructions before attempting to operate the unit and that you note the listed safety information.

Caution

You are cautioned that changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- To prevent fire or shock hazard, do not place objects filled with liquid, such as vases, on the apparatus.
- Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.
- Install this system so that the power cord can be unplugged from the wall socket immediately in the event of trouble.
- Batteries or batteries installed apparatus shall not be exposed to excessive heat such as sunlight or fire.

System Features

- Dock Station with Remote for All iPods/iPhone/iPad
- Line-in Input
- FM Bulid in
- Alarm/Clock Control
- 2 Channel Amplifier
- Real 2 Channel Output
- Power Output: 2x20W for L,R Channel
- Fully Function Remote Control
- Every Channel Adjustable Separately
- iPod/iPhone/iPad Controlled by Remote Control
- iPod/iPhone/iPad Charged Automatically
- LCD Display
- Two-side Work Dock
- L and R Channel Auto-switch Function

Package Contents

1.Main unit
2.AC adapter
3.MP3 audio cables
4.Owner's manual
5.Remote control
6.iPad 2nd generation fittings
7.Warranty card

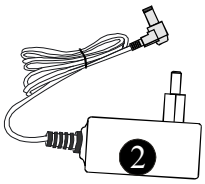

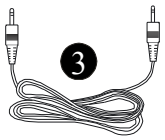

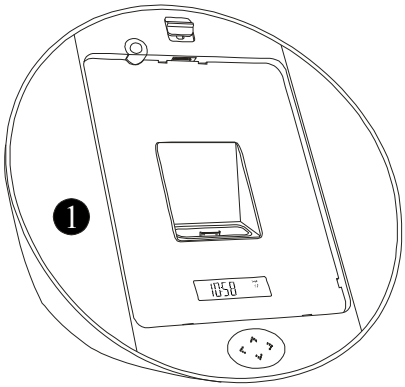

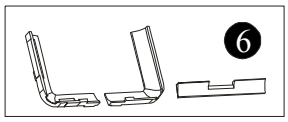

LCD Display Window

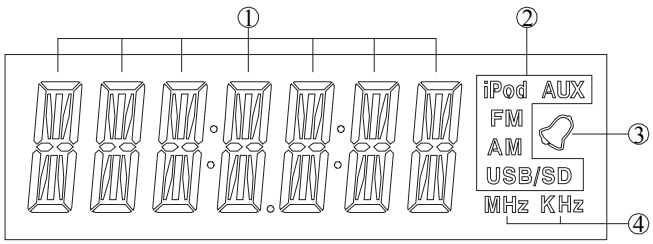

1.Digital display
2.Input display Area
3.Alarm logo
4.MHz/KHz icon

Main Unit

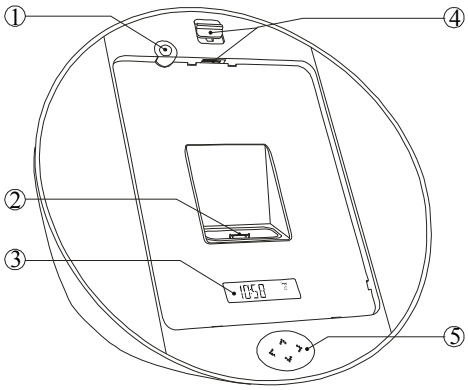

1.iPad take out button
2.iPod/iPhone plug
3.LCD display
4.iPad plug
5.Touch key

Back Panel Connection

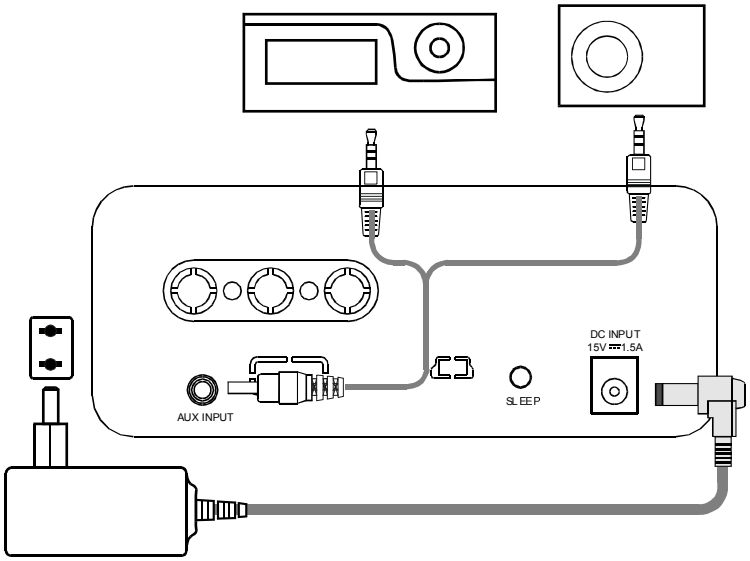

iPod Compatible

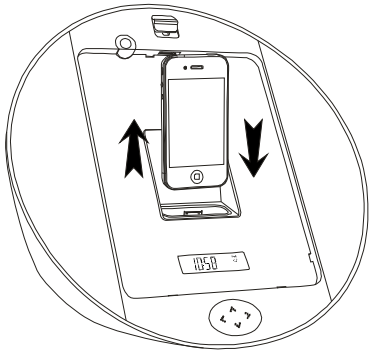

iPod		Supported iPod Features			
Model	Generation	Charging	Audio Playback	Menu Control	Video Playback
iPod	3rd,4th,4th(photo) 5th,6th(Classic)	Yes	Yes	Yes	Yes
Mini	1st, 2nd	Yes	Yes	Yes	Yes
Nano	1st, 2nd, 3rd 4th, 5th, 6th	Yes	Yes	Yes	Yes
Touch	1st, 2nd, 3rd, 4th	Yes	Yes	Yes	Yes
iPhone	1st, 2nd, 3rd, 4th	Yes	Yes	Yes	Yes

iPad Compatible

iPad 1st generation

Connection

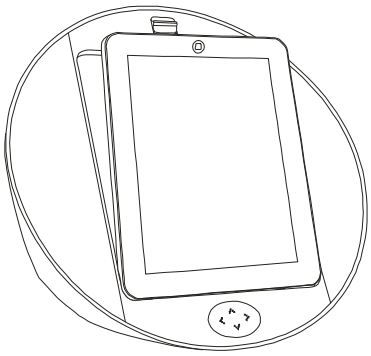

Step 1: Input the iPad

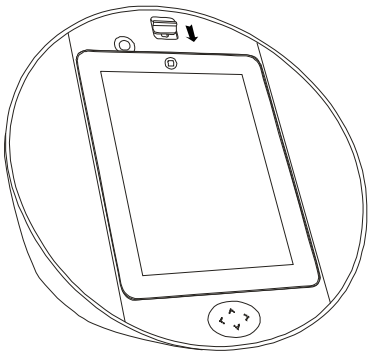

Step 2: Insert the iPad plug

Disconnection

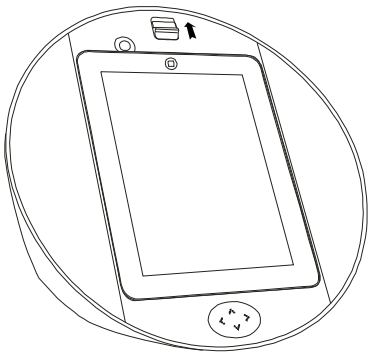

Step 1: Switch off the iPad plug

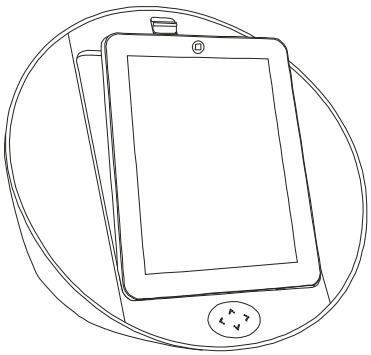

Step 2: Take out the iPad

iPad 2nd generation

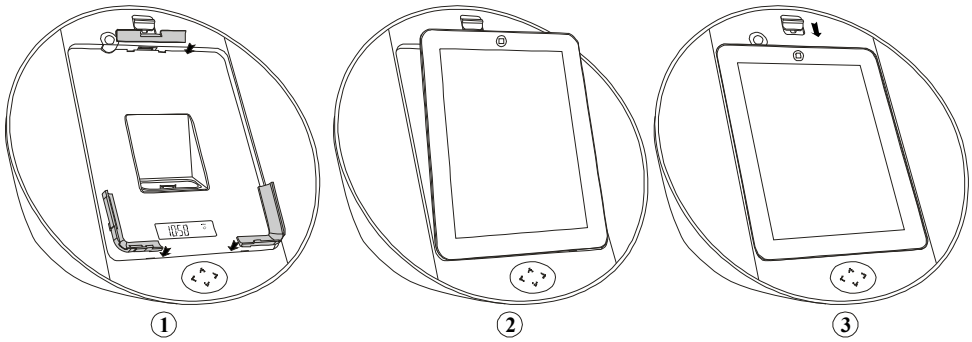

iPad 2nd generation as the same steps as iPad 1st generation, but you must install the three iPad 2nd generation fittings before you input the iPad 2nd generation.

Manner of Working with iPad

When the unit working with iPad you have two ways to place the unit. (90 degree rotation)

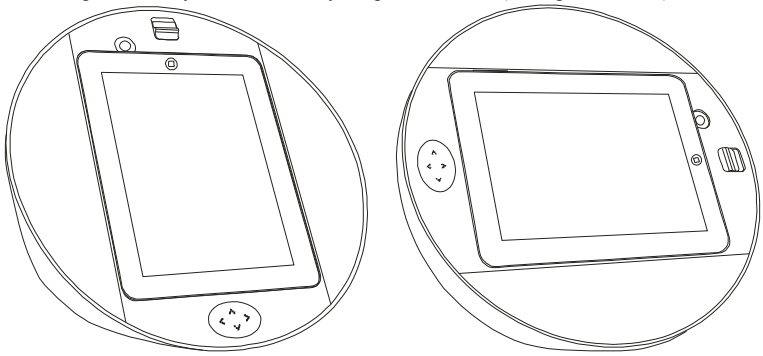

Remote Control System

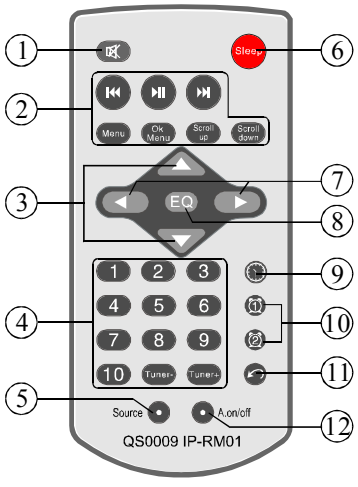

1."Mute mode" control selector
Power on/off control selector
2.iPod/iPhone/iPad control area
3.Adjust settings
4.Tuner control area
5.Alarm source selector(FM's, iPod's)
6.Sleep mode selector
7.Input mode selector(iPod, FM, AUX)
8.EQ control selector(Treb, Bass, Master vol)
9.Clock selector
10.Alarm selector
11.Return to the previous menu when select the clock/alarm.
12.Alarm on/off selector

Battery Installation

1.On the back of the remote control, push the tab and lift off the battery cover.
2.Obtain two (2) fully-charged AAA batteries. Match the "+" and "-" marks on the batteries to the "+" and "-" marks in the battery case, then insert the new batteries.
3.Align the cover keys with the case holes and press the cover back into place. The tab should click when the cover is locked.
4.Test the unit by pressing POWER or any mode key. If the batteries are inserted correctly, the selected mode key will blink once.

Note

- Do not leave the remote control in an extremely hot or humid place.
- Do not use a new battery with old ones.
- Do not mix manganese batteries with other kinds of batteries.
- Do not expose the remote sensor to direct sunlight or lighting apparatuses. Doing so may cause a malfunction.
- If you do not intend to use the remote control for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

Touch Key Control System

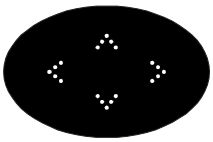

"⋰,⋱": Adjust the system master volume.
"⋰ , ⋮": Select the input mode (iPod, FM or AUX) or search FM frequency automatically when you select the FM input mode. (To right the FM frequency will increase; to left, decrease.)

Basic Operation

Power Up the System

When connecting the AC adapter, the LCD will display "WELCOME". System will power up when it disappear.

Select Sleep Mode

Sleep mode allows you to make the system sleep at a selected time.
1. Press"Sleep"key or press the sleep button on the back panel to select an amount of time before the system shuts off: 5, 15, 30 minutes or off.
2. Wake up the system by pressing the same key when the system in the sleep mode.

Master Volume Control

Press the "△▽" or touch the "⋰ ⋱" Key to adjust the main channel volume.

How to Adjust Treble

Press "EQ" key to choose treble option, and then you can press"△▽" to adjust the treble volume.

How to Adjust Bass

Press "EQ" key to choose bass option, and then you can press"△▽" to adjust the bass volume.

How to Play AUX

Make sure AUX lines are well-connected, Press the "◀ ▶" or touch the "⋰ ⋮" key to choose the AUX input mode.

How to Play iPod/iPhone/iPad

1.iPod/iPhone/iPad connection

Insert iPod/iPhone/iPad into the docking socket. The system will turn to "iPod" input mode automatically. When you move out of the iPod/iPhone/iPad, it will return to the previous input mode.

2.iPod/iPhone/iPad Control

At the top of the remote control there is an area designed especially for iPods/iPhone/iPad player.

"⏯" : Controls the play and pause function of the iPods/iPhone/iPad player.
"⏮⏭" : Press and hold for 2 seconds to Fast Forward or Fast Reverse.
"⏮⏭" : Controls the iPods/iPhone/iPad player to play the previous or the next song.
"Scroll up" : Selects the previous file of the iPods/iPhone/iPad player.
"Scroll down" : Selects the next file of the iPods/iPhone/iPad Player.
"Menu" : Selects the iPods/iPhone/iPad player to return to the previous submenu.
"Ok Menu" : Controls the iPods/iPhone/iPad player to enter next submenu.

How to Play Tuner

1.Select FM Input Mode

Press the " " or touch the " " key to choose the FM input mode. The LCD will display the last turned channel, for example: 87.50 Mhz.

2.Listen to the Preset Program

Press the number keys "1-10" to select the radio program that you already saved. Once selected, screen will display the radio program's frequency in the memory area.

3.Select Program

Press the " " key to adjust the band of tuner. Press the " " key for 2 seconds, the FM will search automatically. You can press " " the key once to stop the function .

4.Memory Program

When you receive a clear radio program and want to save the channel, press one of the 10 "1-10" number key for 2 seconds to assign that number key to that channel.

How to Adjust the Clock

Press " " key to enter the clock adjustment menu. Then you can adjust the hours by press " " key. After hours setting, press " " key to adjust the minutes, after minutes setting, you can press " " key to confirm the setting or Press " " key to return the hours adjustment menu.

How to Adjust the Alarm

1.Alarm Setting

You can set 2 alarms by this system, the alarm1/alarm2 setting has the same operation as the clock setting, after the setting, the time on the screen will flicker momentarily to confirm successful alarm setup.

2.Alarm Source Setting

When you want to select the alarm1(alarm2) source, press the " ( )" key and choose the alarm source (FM's, iPod's) by press the " " key.

3.Turn on/off Alarm

When you want to turn on the alarm1(alarm2), press the " ( )" key and turn on the alarm by the " " key. When the alarm is on, the " "logo will flash all the time. Then you can press " ","","","key to turn off the alarm. If you choose FM's alarm source, the system will turn to FM input mode; if you choose iPod's alarm source, the system will turn to iPod input mode.

How to Mute

Press " " key to turn sound off/on.Press again to restore the audio to the original level.

Trouble Shooting

Problem	Possible Reasons/solutions
The system has no power.	• The AC adapter is connected incorrectly. • The socket has no power.
No sound at all.	• Incorrect selection of input signal. • If mute state is turned on. • Sound source machine is not powered.
Either of the main channels has no sound.	• The signal plug is connected incorrectly or lines are short-circuited.
LCD screen displays abnormally.	• It may be effected by exterior strong disturbance, turn off first and then turn on again. • Avoid direct sunlight/heat.

Pyle PIPDSP2B

Описание Характеристики Аксессуары

Оформление кредита онлайн за 2 минуты

Доставка заказов по всей России

Круглосуточная служба поддержки

Оплата заказа любым удобным способом